

HOW TO INSTALL A SIGN WITH TYPE A STAND OFF MOUNTS

TOOLS NEEDED




1. WITH A HELPER POSITION THE PANEL ONTO THE WALL AND LEVEL



4. INSERT ANCHORS



2. MARK HOLES WITH SHARPIE OR PEN

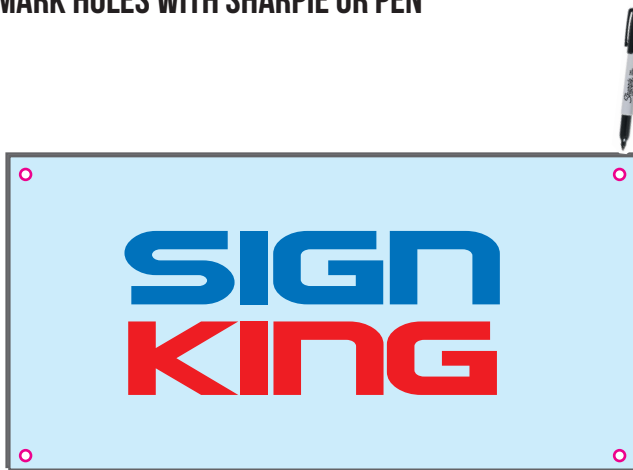

5. SCREW IN BARREL SPACERS



3. REMOVE PANEL AND DRILL PILOT HOLES WHERE MARKED (HOLES NEED TO BE SMALLER THEN ANCHORS SO THEY FIT TIGHTLY)



6. AGAIN WITH A HELPER HOLD THE PANEL IN PLACE AND SCREW ON CAPS

